



Sole F80-S77 Lube Message Reset

To Reset Lube Message :

1. Remove the tether cord
2. Hold down the Start, Enter and Stop buttons and replace the tether cord.
3. On the display it will show Engineering Mode.
4. Press the Enter button
5. Press the Up button until you see Functions on the display. Press Enter
6. Press the Up button until you see Maintenance on the display. Press Enter
7. Press the Up button until you see Lube Message Reset on the display. Press Enter
8. Press the Stop switch to exit.

For more information, please contact our SOLE Service Department.

www.soletreadmills.com

service@soletreadmills.com

866-MYSOLE1 (866-697-6531)