

## Speed Sensor Adjustment

To adjust the speed sensor.

1. Remove the plastic motor cover. There are either 4 or 5 screws holding the cover in place depending on the model.
2. Locate the speed sensor between the front roller pulley and the frame of the treadmill. It is a small plastic piece approx 1 1/4" long and 1/4" in diameter with a black wire coming from the back of it leading to the electronic board in the motor compartment .
3. Locate the magnets mounted in the face of the pulley. (approx. 3/8" in diameter)
4. The end of the sensor should be positioned approximately 1/8" from the magnet at the closest point.
5. Follow the wire from the sensor to the control board. Make sure the connection is pressed firmly down on the board.

For more information, please contact our SOLE Service Department.

[www.soletreadmills.com](http://www.soletreadmills.com)

Fill out form at <https://soletreadmills.com/technical.php?p=service>

866-MYSOLE1 (866-697-6531)