

Sole UF63 / WF63  
Deck removal

1. Using a Phillips head screwdriver, remove the right and left Rear Adjustment Base covers.



2. Remove the 4 screws on the side of the footrail.



3. Remove the 3 screws that hold down the footrail cover and remove the cover.



4. Remove the two pieces of the footrail by sliding them toward the end of the treadmill.



5. Using an allen wrench, remove the 4 deck bolts.



6. Using an allen wrench, loosen the walking belt. Turn the bolts on each side, counter-clockwise 10-15 turns.



7. Repeat the same process on the other side of the treadmill.
8. Slide the deck out on either side.
9. Remove the belt guides from the original deck and install on the new deck.



10. Slide the new deck into place and install using steps 6 through 1.