


Chain cover adjustment instructions

1. Loosen the three Phillips head screws that are along the bottom of the right and left chain covers.

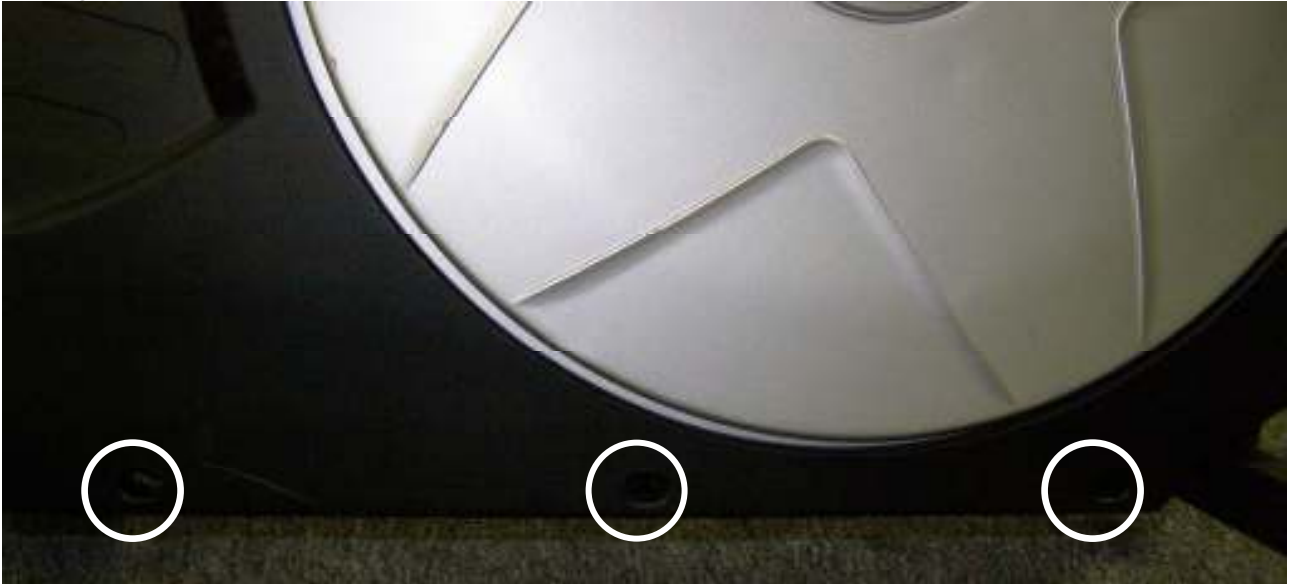

2. Once these 6 screws are loose, you will be able to slide the covers forward or backward in order to stop the disc from rubbing.