

Drive belt replacement instructions

- 1. Turn power switch off.
- 2. Remove the motor hood.
- 3. Loosen tension bolt and four motor bolts.

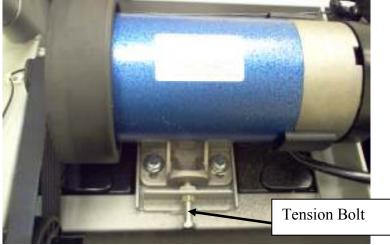

- 4. Using an allen wrench, loosen the tension of the walking belt by turning both the left and right tension bolts counter clockwise.
- 5. Remove the bolt that holds the front roller to the frame.

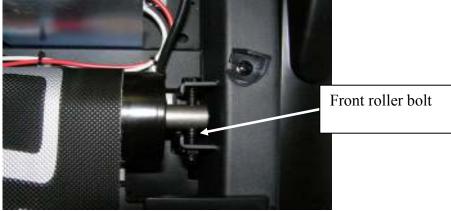

- 6. Slide roller slightly to the Right.
- 7. Replace old belt with new belt.
- 8. Slide the roller back into place on the right side and replace the roller bolt on the left side.
- 9. Tighten the bolt until it is level.
- 10. Tension the drive belt using the tension bolt and then tighten the four motor bolts.
- 11. The drive belt should be tightened until there is only $\frac{1}{2}$ inch to $\frac{1}{4}$ inch of deflection.
- 12. Tension the walking belt using an allen wrench. Turn both right and left bolts in the clockwise direction to tighten the belt.